



## Reverberate

Convolution Reverb for Mac and PC

## User Guide

*Applies to Reverberate v2.000 (and above)*

Liquid Sonics' Reverberate is a highly efficient hybrid convolution reverb audio processor offering true zero-latency operation. Reverberate is able to provide a richer and more dynamic sounding reverb from impulse responses by optionally modulating an amalgamation of two IRs; this combined with a modulating post-processing effects (an all-pass interpolator chorus and over-sampled analogue prototype paragraphic equaliser) means a more lively sound than typically associated with convolution reverbs. In addition to loading impulse responses from audio files Reverberate is able to generate supplementary early reflections for additional control over a room's sonic characteristics.

Introduced in version 2, Fusion-IR processing adds additional modulation capabilities capable of more closely capturing the inherent time-varying nature of some true-stereo reverb systems. By performing multiple true-stereo convolutions in parallel and fusing them together, a richer and more captivating reverb compliments the original source material. This brings convolution closer to the sound of an algorithmic reverb but with the powerful sculpting capabilities only possible with a convolution approach.

## Table of Contents

<b>1.</b>	<b>Installation and Registration</b>	<b>3</b>
	Windows PC	3
	Mac	3
	Impulse Response Locations	3
<b>2.</b>	<b>General Usage</b>	<b>4</b>
	Processing Delay	4
	Lost Files Management	5
<b>2.1.</b>	<b>Impulse Response Editor and EQ Tabs</b>	<b>6</b>
	IR / EQ Bypass	6
	IR Type	6
	Notes on IR Processing Topology	7
	Length and Reversal	11
	Gain	11
	Spatial Widening and Mono Collapse	11
	Amplitude Envelope and Normalisation	12
	Automation Note	12
	Copy / Reset	12
	IR Equaliser Tabs	13
<b>2.2.</b>	<b>Sample and Preset Management</b>	<b>14</b>
	Browser	14
	Presets	14
<b>2.3.</b>	<b>Mixer Tab</b>	<b>16</b>
	LFO	16
	IR1 and IR2	16
	IR Balance (Pan) and Final Mix	17
	IR Chaining	17
	Mono/Stereo Output Mixing	17
	Stereo Channel Invert	17
<b>2.4.</b>	<b>Post Equaliser Tab</b>	<b>18</b>
	Level, Frequency and Type	18
	Modulation	18
<b>2.5.</b>	<b>SplitMod Tab (Early/Late Pitch Modulation)</b>	<b>19</b>
<b>2.6.</b>	<b>All-Pass Interpolator Chorus Tab</b>	<b>20</b>
<b>2.7.</b>	<b>Stereo Modulated Delay Tab</b>	<b>21</b>
<b>2.8.</b>	<b>Settings Tab</b>	<b>22</b>
	<b>Appendix A: Automation Parameter Names</b>	<b>26</b>

## 1. Installation and Registration

To install Reverberate an Intel Mac or Windows DAW PC is required. It is recommended to install the plug-in on at least a Pentium 4 2.4GHz PC with 512MB memory. Installation and registration are different under Mac and PC.

### Windows PC

The install process will request a number of file locations, your license key file and the type of plug-in you wish to install (VST for most hosts or AAX for Pro-Tools). Typically Windows VST plug-ins are installed in c:\Program Files\Steinberg\Vstplugins and this folder location should be selected unless another location is used on the target system.

Special note for 64-bit VST installers: During the installation procedure you will be asked if you wish to install Reverberate 64-bit using the same plug-in as Reverberate 32-bit.

- For new users it is recommended that you use the same ID.
- For users with projects in 32-bit hosts upgrading to 64-bit hosts and installing Reverberate 64-bit it is recommended to use the same ID as the host should then use Reverberate 64-bit with your Reverberate 32-bit presets in your existing projects/songs.
- For users with projects/songs made in Reverberate 64-bit 1.600 and below this is not recommended as the host will no longer be able to locate Reverberate 64-bit.

Whilst it is possible to install Reverberate 32-bit and Reverberate 64-bit at the same time, where the same plug-in ID option is selected with Reverberate 64-bit it is recommended that only Reverberate 64-bit is installed (i.e. Reverberate 32-bit should not be installed to avoid conflicts).

### Mac

To install the plug-in on Mac, simply run the installer and select your local disk. The plug-in provides 32-bit and 64-bit versions in the same binary packages for VST, AU and AAX (the 64-bit version is loaded automatically in 64-bit hosts). Your license file is selected after the installation process – open the plug-in and click the LiquidSonics logo, then click 'License' and then select your license file from a location on disk.

### Impulse Response Locations

The impulse responses included with Reverberate are installed into a default folder by the installer. If you wish to manually move these to an alternative location to fit with other impulse responses in your system it is recommended to set up a lost files directory for this (see general usage, lost files management). Do not move the banks files (.fxb files).

## 2. General Usage

The plug-in is split into the following areas:

- Impulse Response Editing Tab (x2) composed of three sub-tabs
  - Impulse responses from files (Wav, WIR, Aiff, SDIR, Flac)
  - Early reflections generator
  - Synthetic noise tail generator
- Impulse Response EQ Tab (x2)
- Impulse Response Mix Tab
- SplitMod (x2, IR1/IR2) Tab
- Chorus (x3, master and IR1/IR2) Tab
- Stereo Modulated Delay (x3, master and IR1/IR2) Tab
- Post Filter with Modulation Tab
- Settings Tab
- Sample Browser (including lost file management)
- Presets Browser

The IR1 and IR2 tabs control the impulse responses to be used for the convolution reverb. Each impulse response also has a dedicated filter tab which is applied as an offline process. The mix tab specifies how the impulse responses are panned and mixed for output. The EQ and Chorus are post effects that are applied to the convolved data from IR1 and IR2 in real-time.

When processing by the tab is active a subtle illumination behind the tab indicates activity. For instance if one of the chorus modules is active in a preset this is indicated by a green hue above the chorus tab. For the mixer tab, any setting that modulates or pans the audio causes the illumination to show. This allows the user to quickly select presets with or without modulation, or to indicate where a delay, chorus or modulation effect may be coming from.

### Processing Delay

On the settings tab is a pull down to change the processing delay associated with the convolution engine. This can be selected from a range of values and applies to all audio processes. Selecting a higher delay typically reduces CPU load. Much effort has gone into optimising the plug-in for efficient operation at zero delay and on a modern processor picking a higher blocking size may be unnecessary.

It should be possible to use the plug-in at zero delay in any host regardless of block size and whatever internal scheme is used to provide the plug-in with samples. Some hosts provide non-



powers of two, uneven or inconsistent numbers of samples across process calls; none of these factors should affect zero latency.

## Lost Files Management

When loading a preset, if impulse responses cannot be found, three means of locating files is provided:

1. If a match cannot automatically be found via the methods below, the user is asked to specify a file (in AAX the GUI must be opened for this selection to happen).
2. Favourite locations are searched if a file is missing on disk at load-time. Specifying favourites is documented in the presets tab section.
3. The Browser Tab's options menu allows the user to select recursive search folder locations. When files are lost, all folders within these locations are investigated when looking for files. It is recommended that high-level locations with a lot of subfolders (e.g. c:\ or /Volumes) are not selected as they will take a long time to search. A file's folder must match to count as the same file, this is so that similarly named files in different folders are not selected.

In the example to the right, *Small Room.wav* would be lost if *My IRs* were to be renamed to *Impulse Responses* or moved into a different folder or disk. Setting this as a search folder as shown below would enable the file to be found as all subfolders of subfolders in *Impulse Responses* will be analysed. A file called *Small Room.wav* within *Rooms 2* would not be found as the enclosing folder (*Rooms 1*) must also match (the version in *Rooms 1* would be selected). Changing *Manufacturer 1* to *My Fave Manufacturer* would not prevent a match as this is at a lower level in the structure.

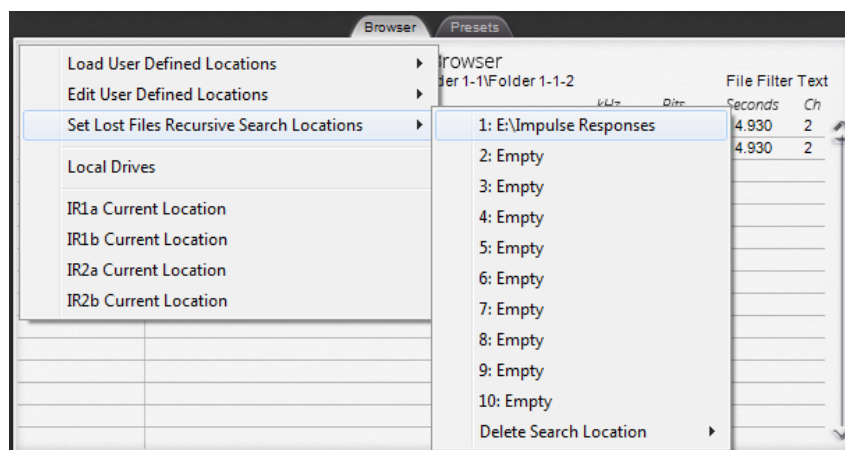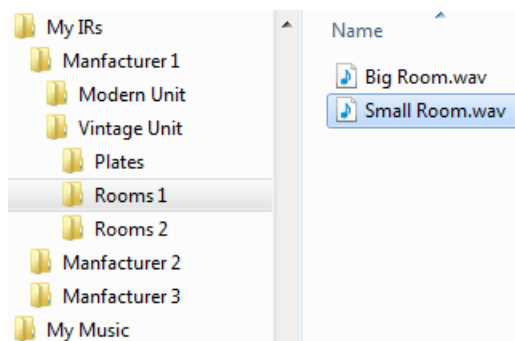

## 2.1. Impulse Response Editor and EQ Tabs

The impulse response tabs are the first encountered and each allows one or two stereo impulse response to be loaded. Processing of each impulse response is done in parallel whilst providing a set of independent controls for each.

### IR / EQ Bypass

The impulse response and filter tabs have a bypass switch to enable processing of the IR and/or EQ within the current tab. The grey/green power icon to the top right hand edge of the screen enables or disables each component.

### IR Type


The type control determines whether a file or bespoke impulse response is to be used for IR1 and/or IR2.

### IR Type: File - Loading Impulse Responses

The impulse response is loaded using the eject button next to the impulse response name (an upwards pointing triangle), by selecting a file in the browser tab or by dropping a file from an Explorer or Finder window into the IR visualisation area.

Mono, stereo and 4-channel IR files can be loaded. The parallel and mono-stereo topology modes will only use the first two channels of a 4-channel file. In true stereo topology mode selecting the same 4-channel file for IRx-A and IRx-B will load channels 1 and 2 into the IRx-A stereo pair and 3 and 4 into the IRx-B stereo pair.


The left and right spinner arrows provide the ability to rapidly move between files in the current directory. When true stereo files are used and the auto pairing mode is active (see the settings tab) the eject and arrows for IR1-A and IR2-A attempt to automatically load an appropriate file into the IR1-B and IR2-B file containers based on the recognition of the presence of L, R, Left and Right (case insensitive) in the file names.

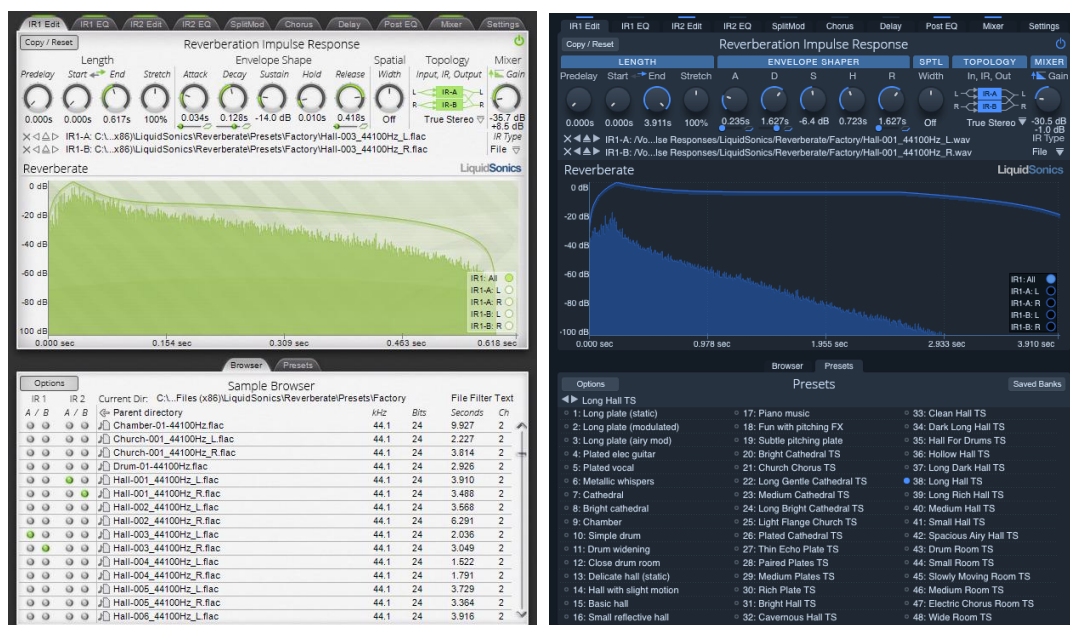


## Notes on IR Processing Topology

Three topologies for convolution are provided for each of the IR1 and IR2 containers:

 
1. **Parallel Stereo:** The left input channel is convolved with the left impulse response channel and the right input channel is convolved with the right impulse response file channel. This is the typical configuration for stereo convolution reverbs when used with stereo impulse responses, although when input audio is panned left or right, using 'Mono to Stereo' may provide more intuitive results.



2. **True Stereo:** The left input channel is convolved with the left *and* right impulse response file channels from IR1-A and the right input channel is convolved with the left *and* right impulse response file channel from IR1-B. The two output convolutions' respective left and right components are then summed into a single stereo output. This configuration is necessary to take full advantage of true stereo impulse responses. True stereo impulse responses are required to be provided as two separate stereo files and loaded into IR1-A and IR1-B (or IR2-A and IR2-B). This configuration is typically found in high-end algorithmic reverbs.

 

 3. **Mono to Stereo:** The left and right input channels are mixed to mono and then independently convolved with the left and right impulse response file channels. When using a single stereo impulse response file, this is useful when input audio is panned hard left or right; this configuration is often encountered in low/medium-end stereo algorithmic reverbs.




4. **Fusion:** LiquidSonics Fusion-IR (.fir) files contain multiple true-stereo impulse responses from the same source at different moments in time that are convolved concurrently and down-mixed to stereo. This approach helps to capture additional time-varying modulation characteristics from time-invariant true-stereo systems. Typically .fir files contain separately sampled early and late IRs for additional mix control. The fusion modulation rate can be controlled as well as suppressing modulation of the early/head IR as shown below.




### ***IR Type: File (Parallel Stereo) – True Stereo Simulation Mode Configuration***

In parallel stereo topology mode the option to select a true stereo simulation is provided increasing the depth of character for standard 2-channel (stereo) impulse responses. Three modes are available:


- Sim-TS Off: The stereo IR is loaded as provided by the file without additional processing. Only IRx-A is used for convolution.
- Sim-TS Clear: A delayed copy of the IR is used as described below to create distinct and clear additional reflections in the IRx-B true stereo convolver.
- Sim-TS Dense: A windowed section of stereo white noise is convolved with the original stereo IR to create a dense set of additional reflections in the IRx-B true stereo convolver.

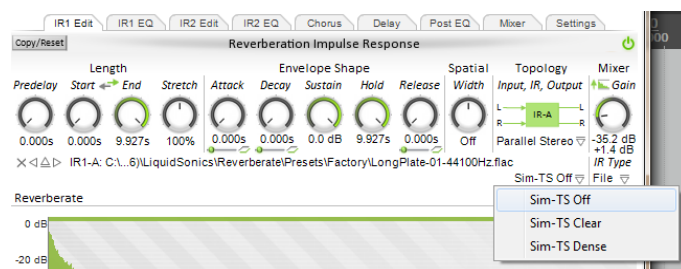

‘Sim-TS Clear’ true stereo simulation is achieved by automatically loading a copy of the enveloped and EQed stereo IR into the IRx-B container as if it were a true stereo IR file pair. The second IR is then channel inverted and has additional user definable high pass filtering, gain reduction and pre-delay applied in order to create the typical effect heard in true stereo IR file pairs where signals bleed into the opposite channel with some delay and filtering.

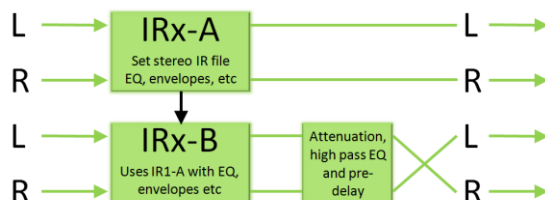

‘Sim-TS Dense’ true stereo simulation is achieved by convolving a section of stereo white noise with the original IR. This creates a set of reflections which can be used to thicken and widen the sound of traditional stereo IRs. In this mode the delay time refers to  $\frac{1}{4}$  pre-delay followed by  $\frac{3}{4}$  linearly decaying windowed white noise (e.g. 40 ms delay has a 10 ms pre-delay and 30 ms decaying noise).

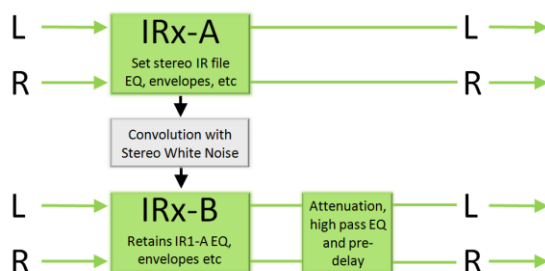




## IR Type: ER – Early Reflections Algorithm Control

The early reflections and filter characteristics of a room greatly determine its character. Reverberate's proprietary virtual point source early reflection algorithms (Hall, Room, Chamber, Basilica, Canyon etc) can be used to supplement or compliment an impulse response's early reflections directly within the plug-in. The following controls are provided within the early reflections module:

- Size: Controls the size of the model space and hence the time between reflections and the quantity of attenuation due to air losses.
- Diffusion: Controls how individual reflections react when meeting walls and surfaces. A high diffusion quantity creates reflections with a high degree of randomness.
- Distance: The distance between the transmitter and receiver.
- Position: The side to side offset between transmitter and receiver affecting wall proximity and panning.
- Separation: The distance between stereo channels for both the transmitter and receiver affecting the perceived width and phase characteristics of the early reflections.
- Depth: Sets the complexity of the reflection model. Low depths have fewer reflections.
- Room type: A pull-down menu below the Depth control to switch the room models. Different rooms have different physical dimensions and filtering characteristics.

Once an IR has been established from a file or generated by the early reflections module it can be modified using the following controls.

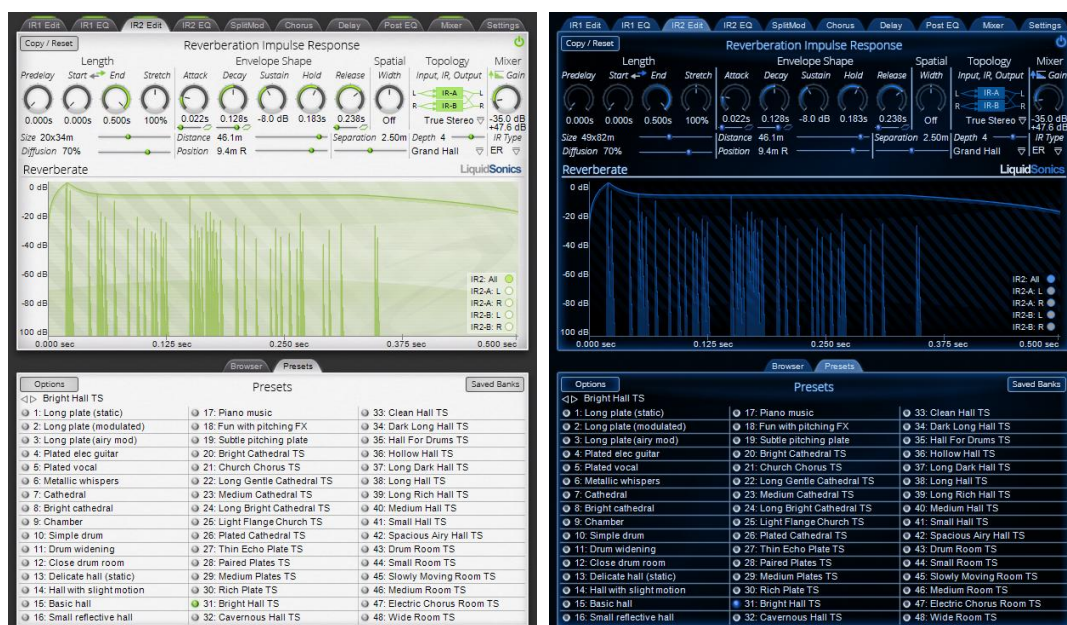

## IR Type: Tail – Synthetic Noise Tail Generator Algorithm Control

Late reflections, also known as tails, provide much of the fullness and richness of longer environments and the sense of space within smaller rooms. As tens of thousands of reflections from multiple walls begin to merge into a cohesive sea of reverb the sonic characteristics of the tails tend towards a dense spectrally shaped sound, similar in character to filtered noise.

Reverberate's tails generator takes advantage of this phenomenon by providing a seeded random noise generation algorithm capable of diffusion to mimic the gradual progression from defined reflections to dense reverb tails. It is possible to create early reflections, late reflections or complete reverb IRs using this generator. Once an IR has been designed the standard shaping and filtering tools can be used to further refine the sound. Synthetic tails typically require filtering in order to provide a natural sound which can be provided based on a number of room models using the tint control or using the IRxEQ tab. The following parameters are available:

- Decay: Provides a base length for the seeded noise generation algorithm.
- Room Tint Model: Applies a base room equalisation (or white, for unfiltered synthetic noise).
- Diffusion: Mimics the diffusion effect of real rooms.
- Converge: Controls the speed at which the reflections diffuse and converge into a dense tail from individually identifiable reflections.
- Variant: Yields different sonic characteristics based on the same decay and diffusion parameters by manipulating the starting value (seed) of the algorithm.
- Diffusion Model: Affects the density and timing of diffusion.



### **Length and Reversal**

Once loaded, the IR can be lengthened, shortened and stretched using the length controls. The IR can be reversed using the arrows icon between the Start and End length controls.

### **Gain**

A replica of the mixer's gain dials are present on the IR1 and IR2 tabs for convenience during IR editing and auditioning. Level meters and additional controls for panning and mix modulation are accessed via the mixer.

### **Spatial Widening and Mono Collapse**

The stereo width of the impulse response can be widened in stereo or collapsed to mono by varying degrees. The widener is activated by using values greater than 100%; the mono collapse mode is active between 0%-100% where 0% is fully mono; 100% represents the original signal.


The stereo widener works by inverting the phase of a delayed (7 ms) copy of each channel and mixing it with the opposing channel. The inversion and opposing channel mix stage creates a traditional widening effect and the delay reduces the impact of any subsequent mono-mix phases. Wideners without a delay phase may cause any widened signals to null if passed through a mono mix stage.

Note that processing works on the IR and not the signal chain, so to arrive at a fully mono output the mono-to-stereo topology mode would be necessary. This is because processing the same IR in L and R channels (i.e. a stereo IR collapsed to a mono IR) with parallel stereo mode retains all stereo width present in the input - processing would sound more like a mono output due to the loss of width in the IR, but not fully mono due to the retained width in the audio input. Alternatively post-process mono mode could be set in the mixer view topology by clicking on the double/single circle imagery.

## Amplitude Envelope and Normalisation

A normalisation parameter is provided to maximise the amplitude of the loaded IR.

The envelope controls provide the traditional synthesizer-style envelope shape controls to control attack, hold and decay of the IR. The shape of the envelopes can be modified to affect the nature of the speed of attack, decay and release. Versions of Reverberate prior to v1.403 used a linear shaped envelope. Versions v1.403 and above allow exponentially decaying and logarithmic envelopes to be defined with a parameter to control the degree of shaping applied (a horizontal slider below the circular dials). Reverb tails may sound more natural when using an exponentially decaying shaped envelope. Note that the plot is logarithmic in the vertical axis; on such a scale linear or log envelope lines are curved and exponential lines are straight.

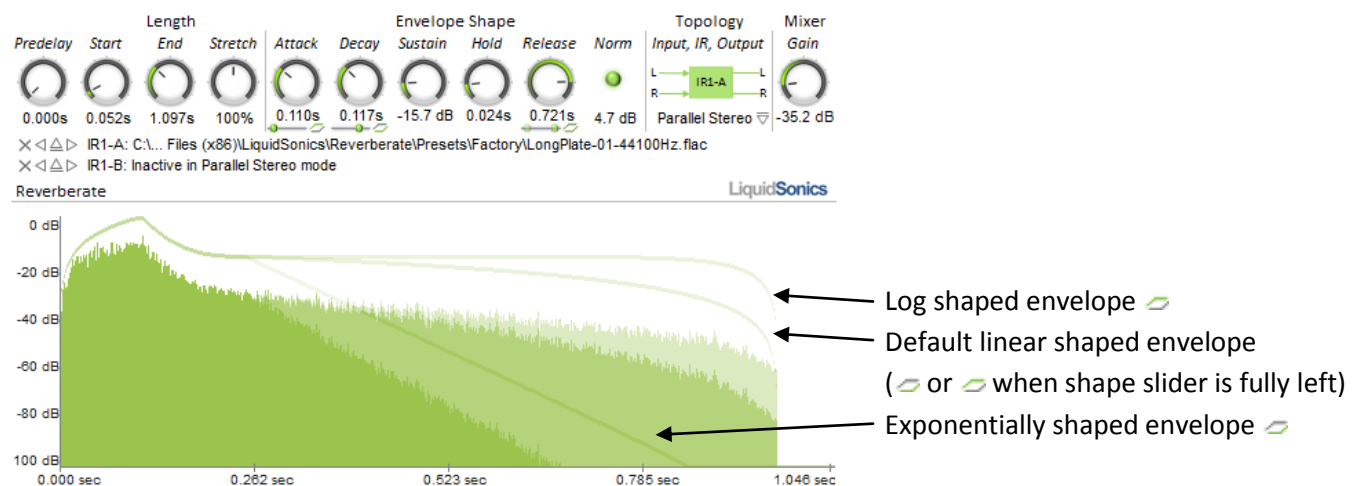

## Automation Note

All parameters in this section can be controlled by/from the host and obey parameter automation instructions, hence real-time modification of these parameters is possible. Since many IR modifications require re-computation for each change requested (denoted by an orange egg timer shown in the top left corner) it is not recommended to apply host based modulation to such parameters as CPU usage will be considerably higher.

## Copy / Reset

Next to the power button (top right) is an option to copy / push settings from IR1 into IR2 or from IR2 into IR1 (depending which IR Editor is selected). This allows the user to configure one IR and duplicate all (or elements of) the settings into the other IR container. A number of reset facilities are also provided along with the capability to swap IR1 and IR2 settings (useful when chaining IRs in the mixer).

## IR Equaliser Tabs

The associated IR EQ filter tabs for each impulse response provide a 5-band twice-oversampled paragraphic EQ which is applied to the impulse response(s) in IR1 and IR2. The frequency and gain of each EQ band can be modulated in time independently to apply swept EQ effects to the impulse responses. When the final frequency and final gain parameters are set fully left no modulation is applied, otherwise the EQ settings applied to the static IR will be modulated linearly between the start to end times chosen. No modulation is applied if the end time is less than the start time.

Modulation of the EQ can be useful for applying subtle low pass filtering where the frequency cut-off reduces over time to mimic the natural high frequency roll-off in real spaces, or for more creative purposes. Frequency modulation can be set to a linear or exponential time base using the button between the Start and End titles. Moving filters often sound more natural with an exponential time base as lower frequencies are more pronounced. Gain modulation can be set to linear or half-cosine.

The view control sets the position of the EQ display in time. When set fully left it represents the initial state of the EQ and fully right shows the final state of the EQ. The output of the IR EQ is not affected by the view control, it is provided purely for user convenience to help visualise the effect the modulation has over time.



Each frequency band has a full controls tab and there is also a consolidated controls tab where the start position of bands 1-5 can be controlled in a single location for a more traditional EQ manipulation view.

The consolidated view contains controls marked with a note button that can be used to set the frequency to a range of presets from A<sub>0</sub> to G<sub>8</sub> providing a very musical approach to equalisation.

The EQ graph handles can be dragged to change gain and frequency, and right clicked to toggle them to enabled or disabled. Holding the keyboard ALT key and clicking a handle toggles the EQ type (peak, low pass, etc).

The sheen control can be used to add high-frequency presence absent from the original IR. This is achieved by mixing in an additional IR with an approximately flat frequency response whose amplitude curve has been shaped to closely match that of the original IR. When IR normalisation is enabled (as is typically the case) this can cause the amplitude of the original IR (which would typically be more bass heavy than the sheen IR) to be reduced accentuating the effect.

## 2.2. Sample and Preset Management

Reverberate includes a browser that can be shown or hidden to save screen space. It assists with locating either presets or IR sample files on disk to load into IR1 or IR2. The browser mode is changed by clicking the IR Browser or Presets lower tab headers.

### Browser

Clicking a file loads a file into the currently active IR1a or IR2a slot (depending on the open tab). Clicking the grey/green radio buttons loads a file into a specific file slot regardless of the open tab.

Use of the radio buttons means IR files can be changed in any of the IR1a/IR1b and IR2a/IR2b slots regardless of the currently selected tab. This is particularly useful when the IR Mixer tab is open as files can be auditioned and the mix gain/pan modified without the need to move between tabs accelerating workflow.

A favourites menu is provided from which the user can focus the browser on any location where an active IR file currently resides, select the local file system disks/drives or manage favourite location presets.

The file filter text box allows the user to filter for files (but not directories) containing a plain-text phrase such as *plate*, *hall* or *aiff*. Some hosts are subject to the caveat discussed in the next section.

### Presets

The preset browser provides a mechanism to select and manipulate the 48 presets within a Reverberate bank. Clicking a preset name selects it, and the name can be edited by clicking the italic copy of the preset name above all the other presets and typing in the box (see caveat below regarding some OS X hosts).

The preset tab is hidden by default in AAX as presets are provided in Pro Tools' native preset format. The presets tab can be shown by selecting this in the settings tab. Within this tab is an option to convert Reverberate presets into Pro Tools TFX preset files.

A number of factory preset banks are available from the Saved Banks button to the right of the preset tab, and the user is able to select up to 10 bank (.fxb file) favourites for future recall.

Further capabilities are available within the load/save menu:

#### *Load/Save: Current Preset:*

- Copy: Copy the current preset to an internal clipboard.
- Paste: Paste the preset in the internal clipboard into the currently selected preset.
- Clear: Wipe the current preset applying an empty preset state.
- Swap with: Swap the positions of the current preset and another preset (to be selected in the sub-menu).

#### *Load/Save: Current Bank of Presets:*

- Load FXB Bank of Presets: Allows the user to select an FXB preset file from disk.




- **Save Presets as FXB Bank:** Saves the current 48 presets in a new FXB bank to be selected by the user.
- **Recent:** Contains a list of recently loaded or saved FXB banks. The list can be edited by clearing all entries, or removing individual items. Any FXB files at start-up found to be missing on disk are automatically (and permanently) removed from the recent bank files list.
- **Clear All Presets in Bank:** Wipe all memory resident presets clean to the empty preset state.
- **Create Bank of Presets From Current Preset:** Using the current preset as a template, create a bank of presets incrementing the IR for each preset from the current directory. Selecting this option on preset 10 will only change presets 10 and above, this is useful when creating presets from files in multiple directories.

*Load/Save: Bank Initialisation Options:* A number of choices are available for the initial presets that will be used when the plug-in is loaded.

- **Initialise as Factory Defaults:** The factory defaults will be loaded.
- **Initialise as Empty Preset:** All presets will be loaded as empty presets ready for use with new configurations.
- **Initialise with User Defined Bank:** Uses the file selected by 'Choose User Defined Bank File'. Clicking this menu item displays what file will be used in a message box.
- **Choose User Defined Bank File:** Opens a file selection dialog so the user can pick a default file to use with the 'Init as User Bank' option.

*Hide Browser and Preset Tab:* This menu option hides the main browser view. A small substitute preset-only selector is shown to allow for basic manipulation of presets when the main preset view is hidden (shown bottom right).

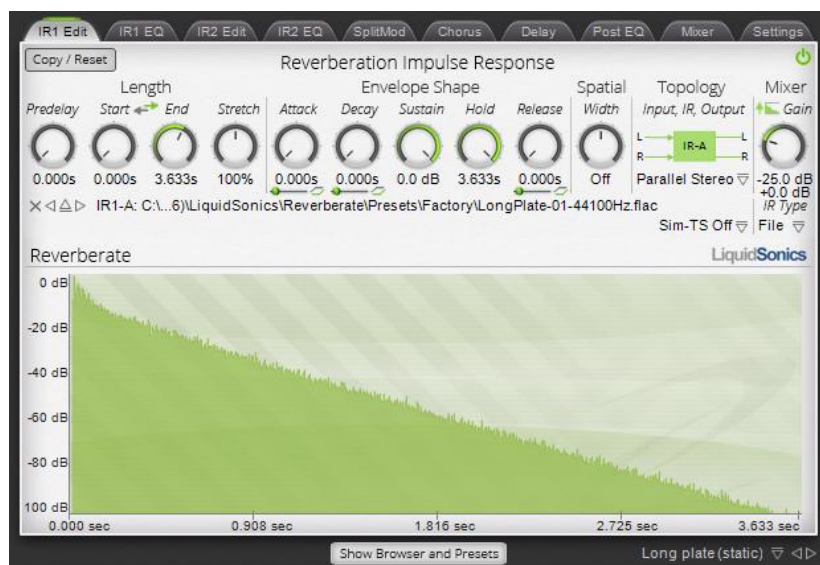


Notes: Prior to v1.400 of Reverberate, the 48 preset slots were managed by the host. Since host support for preset banks is variable (AU hosts in particular) preset management has been taken

within the plug-in such that a consistent bank management experience is available to all users. It is advised to manage presets within Reverberate where possible as many hosts are unable to maintain consistency when users are manipulating preset names within the plug-in. Many plug-ins without a VST bank heritage only provide a single preset per bank avoiding this complication, but this approach cannot be followed to ensure backwards compatibility with presets and banks embedded existing songs.

Caveat: In OS X, preset naming is not possible in Live 8 due to GUI compatibility issues; it is recommended to use the VST and re-name presets via the host and manage all other aspects of presets and banks within Reverberate. LiquidSonics is working with the vendors of these hosts to arrive at suitable solution.

## 2.3. Mixer Tab

The mixer tab provides the ability to set the levels of impulse responses and cross-fade between them. VU meters are provided to give an indication of signal level.

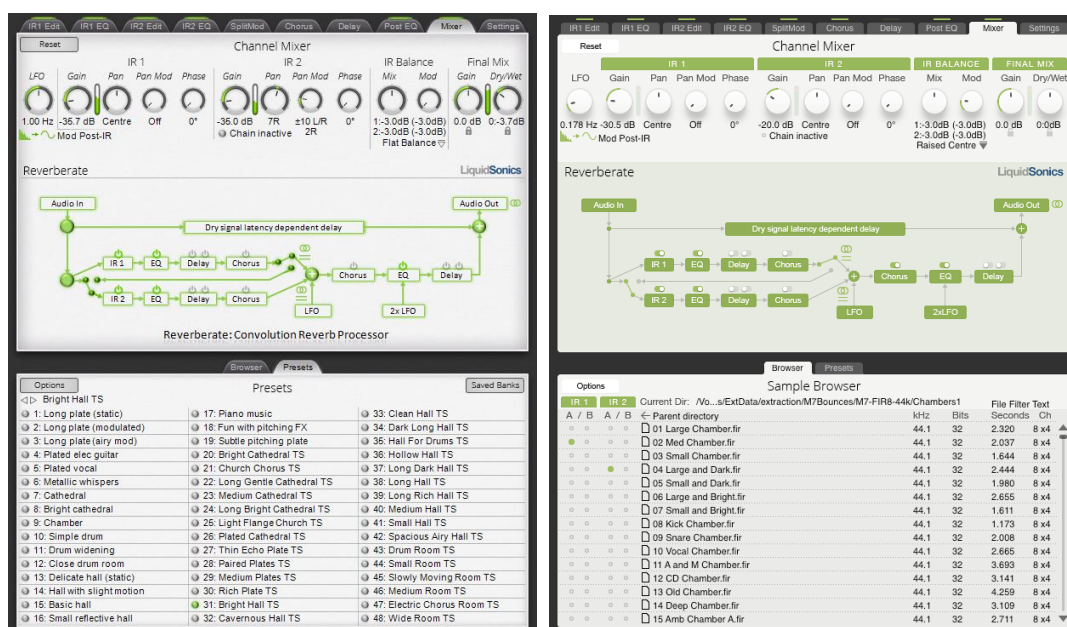

## LFO

The LFO controls the speed of modulation of all the controls featuring modulation on the mixer tab. A control for applying the panning and mix modulation before or after the IR convolution processes is provided.

## IR1 and IR2

Independent gain and pan controls are provided for both IR1 and IR2. The Pan Mod control allows the panning to be modulated using the LFO. The phase of the modulation allows the user to independently control the position of the panning of the impulse responses relative to each other. For example if the pan of IR1 is centre, and a fully modulated pan of IR1 is currently dragging the panning hard left, replicating these settings on IR2 with a pan of 180 degrees will result in a pan of hard right at the same instant. This allows the user to produce effects where the panning of one IR follows or opposes the panning of another.



### IR Balance (Pan) and Final Mix

These sections enable the mix between impulse responses 1 and 2 to be mixed relative to one another. Modulation of the mix parameter is provided with the LFO (the current value of the mix is shown below mod). The Flat Balance vs Raised Centre balance controls the shape of the IR1/IR2 mix curve. Raised Centre provides some boost to the central mix when multiple IRs are loaded and Flat Balance provides an unbiased gain cross-over curve.

The final mix parameters allow one final trim of gain to be made before mixing back with the dry signal (the dry signal is delayed if a non-zero processing delay has been selected for the convolution to keep audio in sync). The gain and mix can be locked using the padlock icon so that during a program change the gain and mix do not change from the previous preset's value.

### IR Chaining


A chain option is provided in the final mix and signal flow areas which feeds the output of IR1 into IR2 rather than processing them in parallel.

### Mono/Stereo Output Mixing

The default behaviour of Reverberate is to process in stereo although it is possible to down-mix to mono from stereo at three stages in the signal flow. Clicking the mono/stereo symbol on the signal flow diagram (two interlinked circles for stereo, a single circle for mono) next to the IR1 or IR2 lines mixes to mono before the pan stages of IR1 and IR2 respectively. Clicking the mono/stereo symbol next to 'Audio Out' mixes to mono as the very final stage of processing.

### Stereo Channel Invert

The Reverberate mixer provides the capability to swap the left and right channels. This can be useful for creative purposes when additional space is desired. For example configuring IR1 and IR2 with the same IR file where the second IR has a pre-delay of 20-100ms / 0.020-0.100s, is high plus low pass filtered and has the L/R channels inverted creates additional space in the reverb space similar to that achieved with true stereo impulse responses. This achieves a similar effect to the simulated true stereo mode provided in the IR1 and IR2 parallel stereo modes but has greater flexibility as the full gamut of controls are available for the IRs.

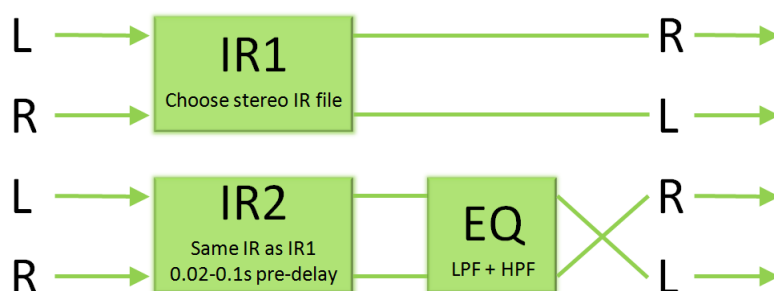


## 2.4. Post Equaliser Tab

Traditionally convolution reverbs provide an FIR filter for their sound modification needs. Whilst FIR filters are linear phase and provide excellent results, they typically cannot provide modulation capabilities as the filter needs a great deal of re-computation every time parameters change. For this reason an oversampled IIR filter using 5-band analogue prototypes has been provided such that the filter can be modulated, providing opportunities for a more dynamic sound.

The EQ graph handles can be dragged to change gain and frequency, and right clicked to toggle them to enabled or disabled. The handle is shown at the midpoint of any gain and frequency modulation.

The filter is provided as a master effect and affects IR1 and IR2 but does not colour the dry path.

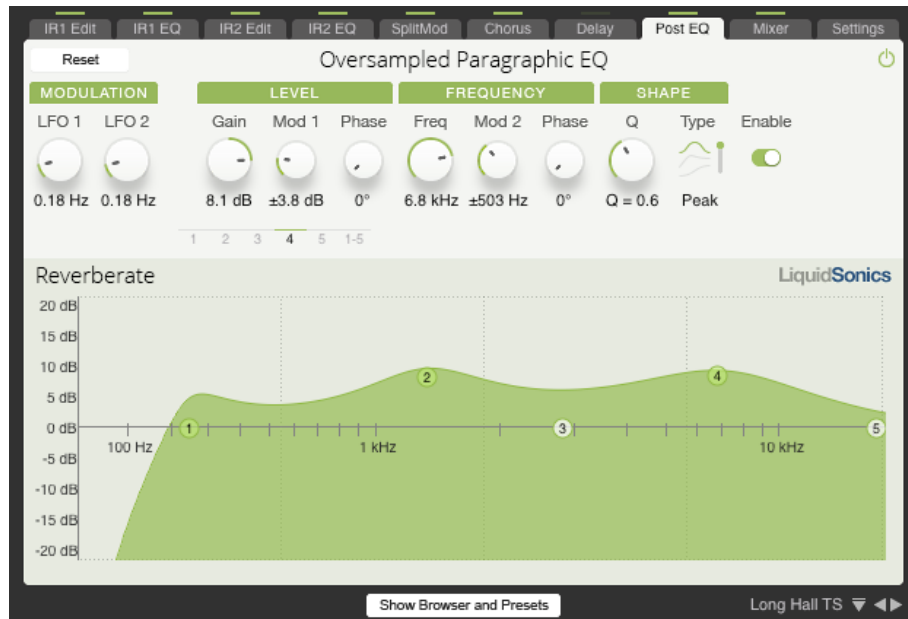

### Level, Frequency and Type

Each filter can be controlled by gain and frequency. The filter types available depend on the filter number.

- Bands 1 and 2 provide low shelf, low cut and peak types.
- Band 3 provides peak type.
- Bands 4 and 5 provide high shelf, high cut and peak types.

### Modulation

Two LFOs are provided for modulation purposes and can be used by any of the five filter bands. LFO1 is tied to gain and LFO2 to frequency. A phase control is provided on all bands such that the phase (position in the LFO) of the modulation can be set independently for each band.

For example, by setting up two peak filters both using frequency modulation it is possible to get the peaks to travel up and down with each other using the same phase, or travelling towards then apart from each other using 180 degrees phase. As the filters update with respect to the modulation they are shown in their instantaneous modulated state in the visualisation window as it refreshes itself.

## 2.5. SplitMod Tab (Early/Late Pitch Modulation)

Many high-end reverb processors modulate their early and late reflections to provide a dynamic and rich sound. Since modulation of individual reflections within a pre-existing impulse response cannot be achieved, a simulation of the net effect of this is provided as a pitch modulator that can be applied to the early and late components of the IR independently. This can provide some of the characteristic thickening and modulation desired in high-end reverb processors.

Two SplitMod modules are provided and are arranged as follows:

- IR1: Connected to the outputs of IR1 (before the mix of IR1-A and IR1-B, if applicable).
- IR2: Connected to the outputs of IR2 (before the mix of IR2-A and IR2-B, if applicable).

When using the pitch modulators the CPU load is higher as independent convolutions are running in parallel as well as up to 4 modulators per IR. The IR is split into two convolvers depending on the 'split at' control, and then a separate pitch modulator is run on each depending on the rate and depth selected.

Higher values of rate and depth cause a spin effect, and lower values more of a wandering effect (for a natural sound lower rate values are recommended somewhere between 0.2 to 1 Hz with a moderate delay depth somewhere between 1 to 2 ms). The rates and depths are slightly altered for each stereo or true stereo channel to increase the perceived modulation.



When operating in Fusion-IR mode the split-at control is unavailable as the early/late modulation control is inherent in the fir file (a head and tail is provided separately and they are modulated as such).

## 2.6. All-Pass Interpolator Chorus Tab


In addition to the SplitMod function which modulates the IRs, a standard chorus is provided for additional thickness. Three chorus modules are provided and are arranged as follows:

- Post: Connected in series after mix of IR1 and IR2.
- IR1: Connected to the outputs of IR1 (after the mix of IR1-A and IR1-B, if applicable).
- IR2: Connected to the outputs of IR2 (after the mix of IR2-A and IR2-B, if applicable).

Many chorus effects use linear interpolators; these can sometimes introduce aliasing or other types of distortion into the signal path so here an all-pass interpolator is used. These are more computationally expensive but tend to sound better than using standard linear interpolation.

The traditional chorus controls are provided where a delay line of a certain length is modulated by a given amount at a given rate. Additional controls are provided to control feedback (from a static point half-way through the delay line) and a width control to control the stereo spread of the effect.

The Copy/Reset button provides a facility to reset individual elements of the chorus and to copy setting to an internal clipboard. Once a setting has been copied to the internal clipboard from the Post, IR1 or IR2 chorus modules it can be pasted to any of the Post, IR1 or IR2 chorus modules in order to facilitate simple duplication of settings.

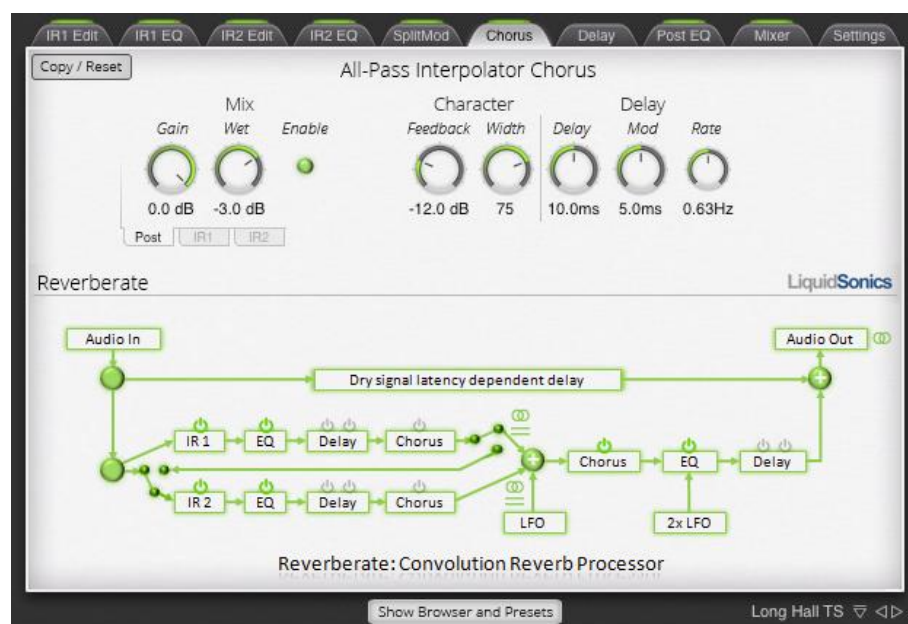

## 2.7. Stereo Modulated Delay Tab

Since a reverb effect is fundamentally a very long delay line with millions of taps simulating reflections upon reflections in a room, many high end reverbs provide tempo delays as additional effects to add a sense of rhythm to the reverb. Ranging from the almost imperceptible to bold and striking, the use of delays can add real depth and character to a reverb.


To bring additional life to the delay, the analogue nature of tape delays (where the delay time is not absolutely constant) can be recreated within Reverberate via two independently controllable delays with delay tap line modulation and rate control (see controls mod and rate). The delays in Reverberate can also be used to create ping-pong type effects using the cross-feed controls (R-Feed / L-Feed).

The input to the left and right delay lines can be turned on and off using the green radio buttons. If one delay input is on and the other input is off, the cross-feed control can still be used to send audio into the left or right unit without an active input. For example if the *L Input* is on and *R Input* is off, using the *R-Feed* control on the left delay channel will input audio into the right delay unit.

The stereo delay is completely bypassed when both of these input buttons is turned off.

Three stereo delay modules are provided and are arranged as follows:

- Post: Connected in series after mix of IR1 and IR2.
- IR1: Connected to the outputs of IR1 (after the mix of IR1-A and IR1-B, if applicable).
- IR2: Connected to the outputs of IR2 (after the mix of IR2-A and IR2-B, if applicable).

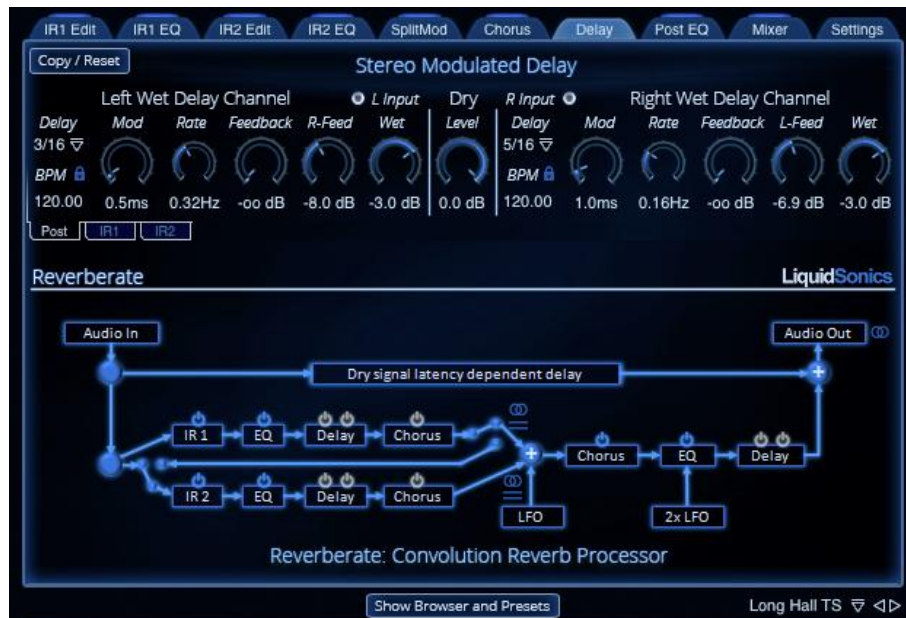

## 2.8. Settings Tab

A number of user settings are provided (selections are saved in the registry for the current user) and apply to all instances of the plug-in. Reloading is typically necessary to propagate settings to all instances.

*Latency:* The latency setting provides a means to set the delay associated with the plug-in. Longer delays increase processing efficiency. A re-start of the plug-in is required to change latency.

*Default Path:* The default IR path controls how the eject buttons operate when selecting impulse responses. The following options are available:

- **Most Recent:** This passes responsibility for setting the initial location of the open box to the operating system; it chooses the most recent location of a file-open dialog box if one is available.
- **Current IR:** The current location of the impulse response in IR1 or IR2 is used (depending which eject button is pressed).
- **User Default:** Depending on the location set with the 'Set Default' option, this option can be used to select a standard location for the starting directory of eject dialog boxes. This may be useful where the user has all their impulse responses stored in a central location on disk (e.g. d:\Productions\Samples\Impulse Responses) and wishes to begin navigating from this location when clicking eject.
- **Set Default:** Opens a directory selection dialog so the user can pick a default directory to use with the 'User Default' option.

*Default Wet Mix:* The default mix level on plug-in start-up or manual preset bank loads can be changed here:

- **Off (Insert):** The wet lock is disabled. Presets are typically provided configured for insert effects.
- **On (Send):** When using a reverb as a send it is common to want all presets to be fully wet. This setting will override any wet/dry data stored in the preset and save it to fully wet. This can then be disabled in the plug-in if desired.
- **Bank Default:** Whatever was saved in the bank regarding wet lock will be preserved on load.

*Auto-Pair True Stereo IR:* When in true stereo mode and auto pairing is selected, loading a true impulse response of the format <name>Left.<extension> or <name>L.<extension> will result in the auto pairing function seeking an appropriate file named <name>Right.<extension> or <name>R.<extension> for paired loading (pairing is case insensitive). This is only active when loading files into the IR1-A and IR2-A containers when using the eject or left/right spinner buttons.

The IR1-B/IR2-B controls do not automatically pair files to enable rapid auditioning of alternative pairings for true stereo impulse responses.

- Off: No pairing is attempted when changing IRs.
- Attempt Pairing: When loading IRs an attempt will be made to pair the files based on file name. If files are named using a scheme not recognised by the plug-in pairing algorithm, no automated pairing will be evident.

*Sample Rate Dependence:* The sample rate of the host or audio device can affect the sound of a convolution reverb. This setting allows the user to normalise the behaviour of reverberate in different host sample rate environments.

- Host Rate Independent: The sample rate setting of the host will not affect the gain or filter behaviour of Reverberate. IRs will be scaled relative to the host sample rate to ensure that the output convolution amplitude is equal regardless of the host or soundcard sample rate setting, and filters are always limited to a maximum frequency of 22 kHz.
- Host Rate Dependent: The sample rate of the host can affect the gain and filter settings of Reverberate. IRs will be normalised with respect to their amplitude only. Running at different host or soundcard sample rates will cause the convolution of IRs to result in differing amplitudes. Filters are limited to the Nyquist of the host sample rate instead of being fixed to 22 kHz. For example, running Reverberate in a host set to 88.2 kHz will result in the convolved audio output being twice as loud as if set to 44.1 kHz using the same IR. This mode of operation is included for compatibility with Reverberate versions 1.240 and below.
- Downsample if >48kHz: In order to conserve CPU, Reverberate can be set to run at half the host sample rate when the host is running at sample rates greater than 48 kHz. Audio is downsampled to half rate, processed, and then upsampled to reduce CPU consumption. For example, 48 kHz runs at 48 kHz, 88.2 kHz runs at 44.1 kHz, 96 kHz runs at 48 kHz, 192 kHz runs at 96 kHz.

*Dials Mode:* Sets the way the dials react to dragging the mouse.

- Circular: Move the mouse in a circular manner to change value.
- Relative Circular: Similar to circular, but moves relative to the current position.
- Slider: Move the mouse up and down to change value. Holding SHIFT on the keyboard allows for fine-grain control in this mode.


*Midi-CC / Assignment x*: Sets a Midi change control (CC) to be assigned to one of a selection common of parameters (e.g. ADSHR envelope, post-EQ, chorus mix, IR1/2 mix, gain and pan). Be aware that automation of parameters that cause an IR to be recomputed (such as the ADSHR envelope) will momentarily place load on the CPU.

Once a Midi-CC number has been selected Midi data must be routed to Reverberate via features in the host application in order for it to be received and acted upon (not all hosts provide this capability but it has been successfully tested in Cubase and Live using both VST and AU).

- **Midi-CC**: Provides a value in the range 0-127, Off or Auto. In Auto mode the next time Reverberate receives any Midi-CC messages the number of the first CC received is selected in the drop-down menu. This feature is sometimes referred to as Midi-Learn and is useful when you do not have a list of CC controller numbers to hand and find it quicker to simply turn a dial on a controller device and have the plug-in use this controller CC number.
- **Assignment**: Links a value to a parameter, or select None to remove any CC/parameter links.

*IR Visualisation*: Enables and disables the facility to show individual channels on the IR view page.

- **Multiple**: Shows selection toggles to enable the different channels of an IR to be selected on the IR1 and IR2 tab views (shown right).
- **IRx-All only**: combines all IR graphs into one (default view).

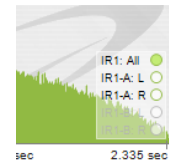

*Colour Scheme*: Changes the colours of the interface.

- **Deep Blue**: The new default theme in Reverberate 2.0 featuring soft dark blue colours with a flat aesthetic suiting many DAWs with understated dark interfaces.
- **Neon Blue**: Vibrant blues and blacks (from Reverberate version 1).
- **Elegant Green**: A flat grey and light green theme.
- **Classic Green**: Subtle greens of the classic Reverberate interface (this was the default Reverberate version 1 theme formerly known as 'soft green').
- **Deep Purple**: A purple theme based on the Deep Blue theme.







Deep Blue




Neon Blue

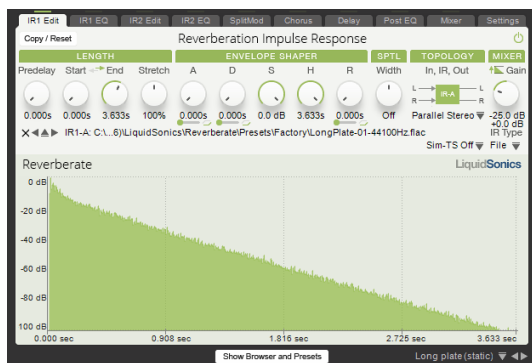

Elegant Green

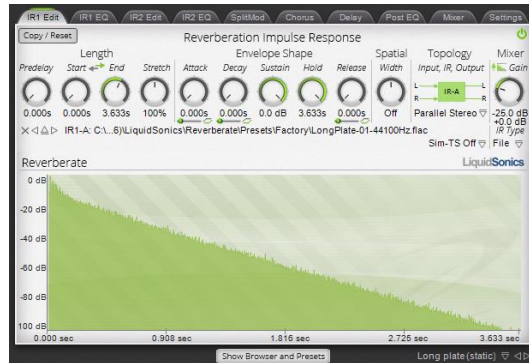

Classic Green

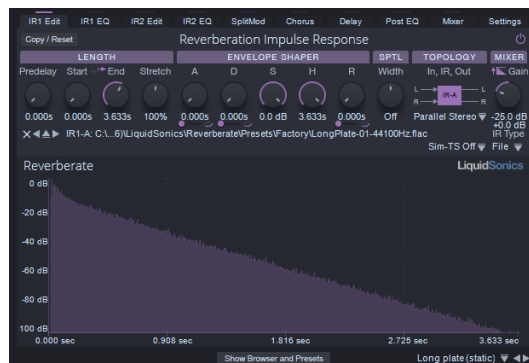

Deep Purple

## Appendix A: Automation Parameter Names

### Master params

Master gain	Gain
Master mix	ReverbMix1
Master IR1 IR2 mix	IR1/2Mix
Master IR1 IR2 mix mod	IRMixMod
Master wet lock ignore	WetLockIg
Master stereo mono	MasterSt
IR1-IR2 chain	IRChain
Mix mod pre/post conv	MxModOrdr
Bank's cur program select	Prog#Sel

### LFOs

Master EQ LFO1	LFO1Rate
Master EQ LFO2	LFO2Rate
Master mix rate	LFO3Rate

### IR1

IR1 toggle	IROnOff1
IR1 topology	IRTply1
IR1 normalise	IRNorm1
IR1 gain	IRGain1
IR1 balance	IRBal1
IR1 balance mod	IRBal1Md
IR1 balance mod phase	IRBal1Ph
IR1 stereo mono	IR1St
IR1 user resample factor	Length1
IR1 crop from start	CropStrt1
IR1 crop from end	CropEnd1
IR1 reverse	IRRev1
IR1 L/R channel reverse	IRXCha1
IR1 ADSHR A	Attack1
IR1 ADSHR D	Decay1
IR1 ADSHR S	Sustain1
IR1 ADSHR H	Hold1
IR1 ADSHR R	Release1
IR1 ADSHR A shape	Atk1Shp
IR1 ADSHR D shape	Dec1Shp
IR1 ADSHR R shape	Rel1Shp
IR1 ADSHR A shape inv	Atk1Shpl
IR1 ADSHR D shape inv	Dec1Shpl
IR1 ADSHR R shape inv	Rel1Shpl
IR1 pre delay	PreDelay1
IR1 Width	IRWidth1
IR1 ER Size	ERSize1
IR1 ER Diffusion	ERDiff1
IR1 ER Distance	ERDist1
IR1 ER Position	ERPos1
IR1 ER Separation	ERSepr1
IR1 ER Depth	ERDpth1
IR1 Tail Length	TailLen1
IR1 Tail Diffusion	TailDif1
IR1 Tail Variant	TailVrn1
IR1 Tail Convergence	TailCnv1
IR1 Sim-TS Toggle	STSTog1

### IR2

IR2 toggle	IROnOff2
IR2 topology	IRTply2
IR2 normalise	IRNorm2
IR2 gain	IRGain2
IR2 balance	IRBal2
IR2 balance mod	IRBal2Md
IR2 balance mod phase	IRBal2Ph
IR2 stereo mono	IR2St
IR2 user resample factor	Length2
IR2 crop from start	CropStrt2
IR2 crop from end	CropEnd2
IR2 reverse	IRRev2
IR2 L/R Channel reverse	IRXCha2
IR2 ADSHR A	Attack2
IR2 ADSHR D	Decay2
IR2 ADSHR S	Sustain2
IR2 ADSHR H	Hold2
IR2 ADSHR R	Release2
IR2 ADSHR A shape	Atk2Shp
IR2 ADSHR D shape	Dec2Shp
IR2 ADSHR R shape	Rel2Shp
IR2 ADSHR A shape inv	Atk2Shpl
IR2 ADSHR D shape inv	Dec2Shpl
IR2 ADSHR R shape inv	Rel2Shpl
IR2 pre delay	PreDelay2
IR2 Width	IRWidth2
IR2 ER Size	ERSize2
IR2 ER Diffusion	ERDiff2
IR2 ER Distance	ERDist2
IR2 ER Position	ERPos2
IR2 ER Separation	ERSepr2
IR2 ER Depth	ERDpth2
IR2 Tail Length	TailLen2
IR2 Tail Diffusion	TailDif2
IR2 Tail Variant	TailVrn2
IR2 Tail Convergence	TailCnv2
IR2 Sim-TS Toggle	STSTog2

IR1 Sim-TS Gain	STSGain1	IR2 Sim-TS Gain	STSGain2
IR1 Sim-TS HPF freq	STSFreq1	IR2 Sim-TS HPF freq	STSFreq2
IR1 Sim-TS HPF toggle	STSFrqT1	IR2 Sim-TS HPF toggle	STSFrqT2
IR1 Sim-TS Pre-Delay	STSDly1	IR2 Sim-TS Pre-Delay	STSDly2
Fusion1 Head/Tail Mix	FIR1Mix	Fusion2 Head/Tail Mix	FIR2Mix
Fusion1 Mod Rate	FIR1Rate	Fusion2 Mod Rate	FIR2Rate
Fusion1 Stop Head Mod	FIR1NoHd	Fusion2 Stop Head Mod	FIR2NoHd

#### IR1 filter

IR1 filter Master toggle	IR1filter
IR1 filter1 toggle	IR1filter1
IR1 filter1 mode	IR1Mode1
IR1 filter1 freq	IR1Freq1
IR1 filter1 gain	IR1Gain1
IR1 filter1 q	IR1Q1
IR1 filter2 toggle	IR1filter2
IR1 filter2 mode	IR1Mode2
IR1 filter2 freq	IR1Freq2
IR1 filter2 gain	IR1Gain2
IR1 filter2 q	IR1Q2
IR1 filter3 toggle	IR1filter3
IR1 filter3 mode	IR1Mode3
IR1 filter3 freq	IR1Freq3
IR1 filter3 gain	IR1Gain3
IR1 filter3 q	IR1Q3
IR1 filter4 toggle	IR1filter4
IR1 filter4 mode	IR1Mode4
IR1 filter4 freq	IR1Freq4
IR1 filter4 gain	IR1Gain4
IR1 filter4 q	IR1Q4
IR1 filter5 toggle	IR1filter5
IR1 filter5 mode	IR1Mode5
IR1 filter5 freq	IR1Freq5
IR1 filter5 gain	IR1Gain5
IR1 filter5 q	IR1Q5
IR1 filter1 freq mod to	IR1Fq1to
IR1 filter1 freq start time	IR1Fq1st
IR1 filter1 freq end time	IR1Fq1en
IR1 filter1 gain mod to	IR1Gn1to
IR1 filter1 gain start time	IR1Gn1st
IR1 filter1 gain end time	IR1Gn1en
IR1 filter2 freq mod to	IR1Fq2to
IR1 filter2 freq start time	IR1Fq2st
IR1 filter2 freq end time	IR1Fq2en
IR1 filter2 gain mod to	IR1Gn2to
IR1 filter2 gain start time	IR1Gn2st
IR1 filter2 gain end time	IR1Gn2en
IR1 filter3 freq mod to	IR1Fq3to
IR1 filter3 freq start time	IR1Fq3st
IR1 filter3 freq end time	IR1Fq3en

#### IR2 filter

IR2 filter Master toggle	IR2filter
IR2 filter1 toggle	IR2filter1
IR2 filter1 mode	IR2Mode1
IR2 filter1 freq	IR2Freq1
IR2 filter1 gain	IR2Gain1
IR2 filter1 q	IR2Q1
IR2 filter2 toggle	IR2filter2
IR2 filter2 mode	IR2Mode2
IR2 filter2 freq	IR2Freq2
IR2 filter2 gain	IR2Gain2
IR2 filter2 q	IR2Q2
IR2 filter3 toggle	IR2filter3
IR2 filter3 mode	IR2Mode3
IR2 filter3 freq	IR2Freq3
IR2 filter3 gain	IR2Gain3
IR2 filter3 q	IR2Q3
IR2 filter4 toggle	IR2filter4
IR2 filter4 mode	IR2Mode4
IR2 filter4 freq	IR2Freq4
IR2 filter4 gain	IR2Gain4
IR2 filter4 q	IR2Q4
IR2 filter5 toggle	IR2filter5
IR2 filter5 mode	IR2Mode5
IR2 filter5 freq	IR2Freq5
IR2 filter5 gain	IR2Gain5
IR2 filter5 q	IR2Q5
IR2 filter1 freq mod to	IR2Fq1to
IR2 filter1 freq start time	IR2Fq1st
IR2 filter1 freq end time	IR2Fq1en
IR2 filter1 gain mod to	IR2Gn1to
IR2 filter1 gain start time	IR2Gn1st
IR2 filter1 gain end time	IR2Gn1en
IR2 filter2 freq mod to	IR2Fq2to
IR2 filter2 freq start time	IR2Fq2st
IR2 filter2 freq end time	IR2Fq2en
IR2 filter2 gain mod to	IR2Gn2to
IR2 filter2 gain start time	IR2Gn2st
IR2 filter2 gain end time	IR2Gn2en
IR2 filter3 freq mod to	IR2Fq3to
IR2 filter3 freq start time	IR2Fq3st
IR2 filter3 freq end time	IR2Fq3en

IR1 filter3 gain mod to	IR1Gn3to	IR2 filter3 gain mod to	IR2Gn3to
IR1 filter3 gain start time	IR1Gn3st	IR2 filter3 gain start time	IR2Gn3st
IR1 filter3 gain end time	IR1Gn3en	IR2 filter3 gain end time	IR2Gn3en
IR1 filter4 freq mod to	IR1Fq4to	IR2 filter4 freq mod to	IR2Fq4to
IR1 filter4 freq start time	IR1Fq4st	IR2 filter4 freq start time	IR2Fq4st
IR1 filter4 freq end time	IR1Fq4en	IR2 filter4 freq end time	IR2Fq4en
IR1 filter4 gain mod to	IR1Gn4to	IR2 filter4 gain mod to	IR2Gn4to
IR1 filter4 gain start time	IR1Gn4st	IR2 filter4 gain start time	IR2Gn4st
IR1 filter4 gain end time	IR1Gn4en	IR2 filter4 gain end time	IR2Gn4en
IR1 filter5 freq mod to	IR1Fq5to	IR2 filter5 freq mod to	IR2Fq5to
IR1 filter5 freq start time	IR1Fq5st	IR2 filter5 freq start time	IR2Fq5st
IR1 filter5 freq end time	IR1Fq5en	IR2 filter5 freq end time	IR2Fq5en
IR1 filter5 gain mod to	IR1Gn5to	IR2 filter5 gain mod to	IR2Gn5to
IR1 filter5 gain start time	IR1Gn5st	IR2 filter5 gain start time	IR2Gn5st
IR1 filter5 gain end time	IR1Gn5en	IR2 filter5 gain end time	IR2Gn5en
IR1 filter1 freq mod shape	EQ1Frq1S	IR2 filter1 freq mod shape	EQ2Frq1S
IR1 filter2 freq mod shape	EQ1Frq2S	IR2 filter2 freq mod shape	EQ2Frq2S
IR1 filter3 freq mod shape	EQ1Frq3S	IR2 filter3 freq mod shape	EQ2Frq3S
IR1 filter4 freq mod shape	EQ1Frq4S	IR2 filter4 freq mod shape	EQ2Frq4S
IR1 filter5 freq mod shape	EQ1Frq5S	IR2 filter5 freq mod shape	EQ2Frq5S

#### Master filter

Filter Master toggle	Filters
Filter1 toggle	Filter#1
Filter1 mode	Mode #1
Filter1 freq	Freq #1
Filter1 freq mod	FrqMod#1
Filter1 freq mod phase	FrqMPH#1
Filter1 gain	Gain #1
Filter1 gain mod	GainM#1
Filter1 gain mod phase	GainMP#1
Filter1 q	Q #1
Filter2 toggle	Filter#2
Filter2 mode	Mode #2
Filter2 freq	Freq #2
Filter2 freq mod	FrqMod#2
Filter2 freq mod phase	FrqMPH#2
Filter2 gain	Gain #2
Filter2 gain mod	GainM#2
Filter2 gain mod phase	GainMP#2
Filter2 q	Q #2
Filter3 toggle	Filter#3
Filter3 mode	Mode #3
Filter3 freq	Freq #3
Filter3 freq mod	FrqMod#3
Filter3 freq mod phase	FrqMPH#3
Filter3 gain	Gain #3
Filter3 gain mod	GainM#3
Filter3 gain mod phase	GainMP#3
Filter3 q	Q #3

#### Chorus

Chorus Master feedback	ChrMFdB
Chorus Master width	ChrMWdth
Chorus Master dry	ChrMDry
Chorus Master wet	ChrMWet
Chorus Master delay ms	ChrMDly
Chorus Master delay mod ms	ChrMDIMd
Chorus Master delay mod rate hz	ChrMDIRt
Chorus Master toggle	ChrMTgle
Chorus IR1 feedback	Chr1FdB
Chorus IR1 width	Chr1Wdth
Chorus IR1 dry	Chr1Dry
Chorus IR1 wet	Chr1Wet
Chorus IR1 delay ms	Chr1Dly
Chorus IR1 delay mod ms	Chr1DIMd
Chorus IR1 delay mod rate hz	Chr1DIRt
Chorus IR1 toggle	Chr1Tgle
Chorus IR2 feedback	Chr2FdB
Chorus IR2 width	Chr2Wdth
Chorus IR2 dry	Chr2Dry
Chorus IR2 wet	Chr2Wet
Chorus IR2 delay ms	Chr2Dly
Chorus IR2 delay mod ms	Chr2DIMd
Chorus IR2 delay mod rate hz	Chr2DIRt
Chorus IR2 toggle	Chr2Tgle

Filter4 toggle	Filter#4	<u>IR2 Delay</u>	
Filter4 mode	Mode #4	IR2 Delay Dry	Dly2LDry
Filter4 freq	Freq #4	IR2 Delay L Feedback	Dly2LFdB
Filter4 freq mod	FrqMod#4	IR2 Delay L R-Feedback	Dly2LFBO
Filter4 freq mod phase	FrqMPH#4	IR2 Delay L Wet	Dly2LWet
Filter4 gain	Gain #4	IR2 Delay L Delay mod	Dly2LDIM
Filter4 gain mod	GainM#4	IR2 Delay L Delay mod rate	Dly2LDIR
Filter4 gain mod phase	GainMP#4	IR2 Delay L Toggle	Dly2LTgl
Filter4 q	Q #4	IR2 Delay R Feedback	Dly2RFdB
Filter5 toggle	Filter#5	IR2 Delay R L-Feedback	Dly2RFBO
Filter5 mode	Mode #5	IR2 Delay R Wet	Dly2RWet
Filter5 freq	Freq #5	IR2 Delay R Delay mod	Dly2RDIM
Filter5 freq mod	FrqMod#5	IR2 Delay R Delay mod rate	Dly2RDIR
Filter5 freq mod phase	FrqMPH#5	IR2 Delay R Toggle	Dly2RTgl
Filter5 gain mod	GainM#5	IR2 Delay L Tempo lock	Dly2-LkL
Filter5 gain mod phase	GainMP#5	IR2 Delay R Tempo lock	Dly2-LkR
Filter5 gain	Gain #5		
Filter5 q	Q #5		

#### IR1 Delay

IR1 Delay Dry	Dly1LDry
IR1 Delay L Feedback	Dly1LFdB
IR1 Delay L R-Feedback	Dly1LFBO
IR1 Delay L Wet	Dly1LWet
IR1 Delay L Delay mod	Dly1LDIM
IR1 Delay L Delay mod rate	Dly1LDIR
IR1 Delay L Toggle	Dly1LTgl
IR1 Delay R Feedback	Dly1RFdB
IR1 Delay R L-Feedback	Dly1RFBO
IR1 Delay R Wet	Dly1RWet
IR1 Delay R Delay mod	Dly1RDIM
IR1 Delay R Delay mod rate	Dly1RDIR
IR1 Delay R Toggle	Dly1RTgl
IR1 Delay L Tempo lock	Dly1-LkL
IR1 Delay R Tempo lock	Dly1-LkR

#### IR1 SplitMod

IR1 Split Point	IR1SM-SP
IR1 Section 1 Toggle	IR1SM1Tg
IR1 Section 1 Mod Rate	IR1SM1MR
IR1 Section 1 Mod Depth	IR1SM1MD
IR1 Section 2 Toggle	IR1SM2Tg
IR1 Section 2 Mod Rate	IR1SM2MR
IR1 Section 2 Mod Depth	IR1SM2MD

#### Master Delay

Master Delay Dry	DlyMLDry
Master Delay L Feedback	DlyMLFdB
Master Delay L R-Feedback	DlyMLFBO
Master Delay L Wet	DlyMLWet
Master Delay L Delay mod	DlyMLDIM
Master Delay L Delay mod rate	DlyMLDIR
Master Delay L Toggle	DlyMLTgl
Master Delay R Feedback	DlyMRFdB
Master Delay R L-Feedback	DlyMRFBO
Master Delay R Wet	DlyMRWet
Master Delay R Delay mod	DlyMRDIM
Master Delay R Delay mod rate	DlyMRDIR
Master Delay R Toggle	DlyMRTgl
Master Delay L Tempo lock	DlyM-LkL
Master Delay R Tempo lock	DlyM-LkR

#### IR2 SplitMod

IR2 Split Point	IR2SM-SP
IR2 Section 1 Toggle	IR2SM1Tg
IR2 Section 1 Mod Rate	IR2SM1MR
IR2 Section 1 Mod Depth	IR2SM1MD
IR2 Section 2 Toggle	IR2SM2Tg
IR2 Section 2 Mod Rate	IR2SM2MR
IR2 Section 2 Mod Depth	IR2SM2MD